

Application Brief

Real-Time Load Diagnostics



Pedro Ramirez

Mid-Power Audio

Real-Time Load Diagnostics

This application brief discusses the embedded implementation of real-time load diagnostics feature in the TAS6584-Q1 automotive 45-V, four-channel Class-D audio amplifier IC. While AC and DC diagnostics verifies the status of the load before enabling the output, real-time load diagnostics monitors the speaker output conditions while audio is playing and fault conditions are notified through the I2C bus and a designated I/O pin. The TAS6584-Q1 is able to detect in real-time an open load, short load, short-to-ground, and short-to-power condition by using integrated current sensing circuitry.

Real-Time Load Diagnostics in Class-D Amplifiers

The TAS6584-Q1 not only provides AC and DC diagnostics, which detect load fault conditions before audio is playing, but also provides embedded real-time load diagnostic capabilities. These capabilities allow the device to monitor the current of the load while the audio is playing to determine short load, open load, short-to-ground, and short-to-power faults. Real-time load diagnostics can be run simultaneously while audio is playing or can be enabled or disabled individually. Figure 1 shows a simplified block diagram of Real-Time load diagnostics (RTLDDG) for the TAS6584-Q1.

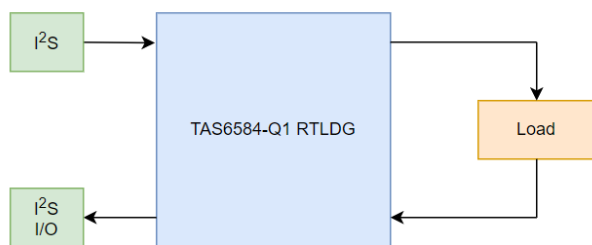


Figure 1. TAS6584-Q1 Real-Time Load Diagnostics

Short Load and Open Load Diagnostics

Previous Automotive Class-D audio amplifiers detected short and open load conditions before the audio began to play, preventing audio from playing if a fault condition is detected. The TAS6584-Q1 not only includes these diagnostics but also uses the

embedded current sense capabilities. The TAS6584-Q1 uses the sensed current to detect short load and open load faults while audio is playing. The TAS6584-Q1 internally generates an always present, inaudible audio signal in the DSP. This is called a *Pilot Tone*. The pilot tone is mixed into the audio signal. After filtering and demodulation, the output impedance is able to be continuously detected. This impedance is compared to thresholds the user configures to detect shorted load and open load circumstances. The user can configure the shorted load and open load thresholds individually before the real-time load diagnostics are enabled.

If the output impedance is higher than the open load threshold, then an open load is reported to the register. If the output impedance is lower than the shorted threshold, then a shorted load is reported to the register. When a shorted load or open load event is detected, the flags are reported to the `RTLDDG_OL_SL_Fault_Mem` register. These events can then be directly routed to one of the I/O pins on the device as either fault events or warning events. These signals are also provided to the user through the I2C bus. Channels that encounter short load or open load threshold violations stop switching and are moved into a FAULT state. The FAULT must be cleared before the channel can be restarted and the real-time load diagnostics must be reprogrammed.

Short-to-Ground and Short-to-Power Diagnostics

In addition to detecting short-to-ground and short-to-power conditions before enabling audio, the TAS6584-Q1 uses the current sense capabilities to detect short-to-ground and short-to-power faults while audio is playing. These diagnostics detect shorts with low impedance before audio plays and detect shorts with higher impedance while audio is playing with real-time load diagnostics. The TAS6584-Q1 uses the sensed current of the individual channel output FETs and compares the offset between the FETs to a user configured short-to-ground threshold and open-to-ground threshold. Configure these thresholds before the diagnostics are enabled. If a threshold violation is detected, then a short-to-power and short-to-ground flag is sent to the `RTLDDG_Fault_Mem` register. Similar to the SL and OL flag, this signal can

also be routed directly to one of the I/O pins on the device as a fault event. If a channel detects a short-to-power or short-to-ground event, the channel stops switching and moves into a FAULT state. This FAULT must be clear before the channel can be restarted and the real-time load diagnostics must be re-enabled.

PurePath™ Console

Texas Instruments offers a powerful audio design tool called PurePath Console, which provides a simple

and easy-to-use GUI to assist with audio evaluation and design. An interface with real-time results of the real-time load diagnostic tests used in the PurePath Console demonstrates the real-time current sense capabilities of the TAS6584-Q1.

To access more information about real-time load diagnostics or more information about the TAS6584-Q1, please contact Texas Instruments.

Resources

- Texas Instruments, [TAS6584-Q1-Automotive 45-V, 10-A digital input, four-channel Class-D audio amplifier with current sense](#) product page
- Texas Instruments, [TAS6584-Q1 EVM](#) tools page
- Texas Instruments, [Diagnostics and Protections in Automotive Audio Systems](#) application brief
- Texas Instruments, [PurePath™ Console graphical development suite for audio system design and development](#)

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2022, Texas Instruments Incorporated